



Fig. 5 Crankshaft-flywheel Assy(Y385T-1)

Fig. No.	Ser No.	Fig./Ser.NO	Parts No.	Name of Parts	Qty.	U.P.(RMB)
5	1	F5S1	Y480G-05007	Starting claw	1	13
5	2	F5S2	Y480G-05006	Starting claw backing plate	1	6.2
5	3	F5S3	Y385T-1-05005	Crankshaft belt pulley	1	62
5	4	F5S4	Y385-05003	Crankshaft	1	580
5	5	F5S5	GB/T1096-C10×64	Key C10×64	1	3.2
5	6	F5S6	Y480G05004	Plug	3	1.2
5	7	F5S7	Y480G-05102	Flywheel gear ring	1	115
5	8	F5S8	Y385T-1-05101	Flywheel	1	185
5	9	F5S9	GB/T119-B8×20	Pin B8×20	1	
5	10	F5S10	Y480G-05002	Flywheel bolt backing plate	1	18.5
5	11	F5S11	Y385T-1-05001	Flywheel bolt	6	5.8
5	12	F5S12	GB/T93-8	Washer 8	6	
5	13	F5S13	GB/T97.1-8-140HV	Washer 8-140HV	6	
5	14	F5S14	GB/T5783-M8×25	Bolt M8×25	6	
5	15	F5S15	Y385T-1-05009	Connecting plate	1	12.5